

✕ ✕ ✕ ✕ ✕

SPHEREMAKER MANUAL

✕ ✕ ✕ ✕ ✕

USER MANUAL FATBOY® SPHEREMAKER

Product information

The Spheremaker is a ceiling lamp with colourful transparent plastic spheres, which can be easily adjusted in height. The lamp comes with LED light bulbs specially designed by Fatboy®, which can be stepless dimmed with the included remote control.

The lamp is available in different sizes with 3, 6 or 9 spheres and the colours at your choice.

The replacement light bulbs are available at www.fatboy.com or your local Fatboy® dealer and can be replaced by the consumer when one of the lights is broken. The lamp is suitable for 100 to 240 VAC power supplies (50/60hz).

INSTRUCTION FOR USE AND MAINTENANCE

Installation:

- Turn off the power to the light fixture at the main circuit panel.
- Mount the lamp to a rigid surface using 2 to 4 screws or anchors.
- Use the right screws, plugs and anchors, suitable for the surface you mount it to.
- Mount the metal ceiling adapter. The metal ceiling adapter has different holes, which can be used to adjust the distance between each screw. It is recommended to use a minimum of 2 screws and at least 4 screws for the Spheremaker size L with 9 spheres.
- Pull the power supply wires through the hole at the center of the metal ceiling adapter, before securing the plate to the ceiling.
- Connect the 2 power wires from the lamp to the corresponding colour of the power supply wires, with wire caps or connector blocks.
- The lamp fixture must be mounted onto the metal

- ceiling adapter by using the included 3 M5 screws.
- Connecting the light bulbs. The connector pins and socket holes are marked with a '+' and '-'. Insert the bulb in the socket holes and turn clockwise to lock. By inserting incorrectly the bulb will not light up.
- Attach the spheres by bending the springs carefully downwards to clamp the fitting onto the opening of the sphere.
- The length of each sphere cable can be easily adjusted by creating a loop in the wire using the small clamps. After that attach the loop to one of the hooks included.
- Attach the Fatboy® label on the wire.
- Before first time use the lamp should be connected (or paired) to the remote control. This can be done by pressing and holding the '+' on the remote control and turning on the power. Now the remote control will fully function.

Use:

- Method 1 (default setting): The power source to the lamp is continuously. The lamp can be fully controlled using the included remote control.

To adjust the brightness:

- Starting position: the lamp is switched OFF.
- Press '+' button shortly: light will turn ON.
- Brightness can be adjusted stepless when pressing and holding the '+' or '-'.
- Press '-' button shortly: the light will turn OFF.
- Method 2: The power source to the lamp is controlled by a switch. Open the remote control and change the position of the black switch inside. This will enable the remote control to function as a dimmer only.
- Use the wall switch to turn the lamp ON or OFF.
- Brightness can be adjusted stepless when pressing and holding the '+' and '-'.

Maintenance:

- When cleaning or changing bulbs, be sure the lamp is turned off.
- Clean carefully with soft cloth.
- To clean the inside of the spheres, detach the spheres by holding them whilst carefully pulling off the cover.

WARNINGS

- Check the voltage of your power supply.
The voltage must be between 100 and 240 V AC.
- Do not expose the lamp to excessive heat from heat sources.
- The lamp is intended for indoor use.
- This lamp is not a toy.

TROUBLESHOOTING

- The lamp does not work:
 - Check connection with the power supply.
 - Lamp has not been paired properly to the remote control.
Please check pair instructions and try to repeat the steps.
 - The bulb has been inserted wrongly. Check if the '+' and '-' marking on the bulb correspond with the marking inside the socket.
 - If one of the bulbs is damaged it can be easily replaced. Go to www.fatboy.com or visit your local Fatboy® dealer.
 - The battery of the remote is empty. Replace the battery (CR2032).
 - If the lamp still doesn't work, please contact your Fatboy® dealer.
 - Never attempt to repair the lamp yourself.

Important! Please contact your Fatboy® dealer if you have any other problems.

TECHNICAL SPECIFICATIONS

- Model: Spheremaker
- Primary rating (adapter): 100-240 V AC, 50/60 Hz
- Secondary rating: 60V DC/ 90 mA (size S), 60V DC/ 180 mA (size M), 60V DC/ 270 mA (size L)
- LED light output: S = 3 x 4 W, M = 6 x 4 W and L = 9 x 4 W
- Safety Class: Class III
- Ambient temperature: -10 to 40 °C
- Cable length per sphere: 175 cm
- Materials: Polycarbonate (shades), ABS, metal
- Dimensions: Spheres diameter 25cm, ceilingkit diameter: S: 30cm, M: 45cm, L: 60cm
- Total weight: S: 2.5 kg, M: 4.8 kg, L: 7.3 kg

Important! This luminaire contains a LED light bulb specially made by Fatboy®, which can be replaced by the end user. The bulbs are available at www.fatboy.com or at your local Fatboy® dealer.

CE-DIRECTIVE

This product complies with the requirements and other relevant provisions of the current European RoHS and CE directives 2011/65/EC, 2004/108/EC and 2006/95/EC.

WEEE INSTRUCTIONS

This product is subject to the provisions of the WEEE directive 2012/19/EU. Do not dispose of this Product together with regular household waste. Consult your local waste disposal authorities for information on collecting point for electrical and electronic waste products.

WARRANTY INFORMATION

Visit www.fatboy.com/warranty for information on warranty on your product. Fatboy® cannot accept any claim on warranty in event of: Damage or defects caused by use, operation or treatment of the product in ways that are inconsistent with normal personal or domestic use; repairs or attempts to repair undertaken by any party other than Fatboy® the original B.V.

**THIS MANUAL IN OTHER LANGUAGES?
GO TO WWW.FATBOY.COM**



DELETING DULL

