

Fatboy carpets & picnic rugs manual

Product Overview

Non flying carpet
Flying carpet
Picking Lounge
Knäpsäck



Warning! Read carefully before use!

- The Knäpsäck is not a toy! Do not allow children to play with this article unsupervised.
- Prevent children from getting trapped in the Knäpsäck or playing with the long rope, this may cause strangulation and/or suffocation hazard.
- The plastic bag that came with your product can be dangerous, to avoid danger of suffocation, keep the bag away from babies and children.

Instructions for use and maintenance:

- The Flying Carpet, Picking Lounge and Knäpsäck are suitable for use outdoors. Store your product inside after use and treat them as you would treat regular garden cushions.
- Excess exposure to sunlight, chlorine and seawater may damage the fabric and cause discolorations on your product.
- The Non flying carpet is suitable for domestic use only.
- Sharp objects can damage the fabric!
- Most stains are easy to clean with lukewarm water and a mild cleanser.
- You can wash the Knäpsäck in your washing machine at maximal 30 degrees. None of the products are suitable to put in your dryer.

Questions or problems?

Please contact your Fatboy® Dealer or Fatboy in the event you have any questions or problems.
Fatboy the original B.V.

De Steenbok 19-21
5215 MG Den Bosch
Netherlands

T: + 31 (0) 73 615 4200 E: service@fatboy.com W: www.fatboy.com

Visit our website www.fatboy.com for information on warranty on your product.

Fatboy cannot accept any claim on warranty in event of:

Damage or defects caused by use, operation or treatment of the product in ways that are inconsistent with normal personal or domestic use; repairs or attempts to repair undertaken by any party other than Fatboy the original B.V.